


1

Remove All Items From Packaging


- Display Monitor
- Transmitter
- Sensor
- 6 x AA Batteries
- Quick Start Guide
- User Manual.

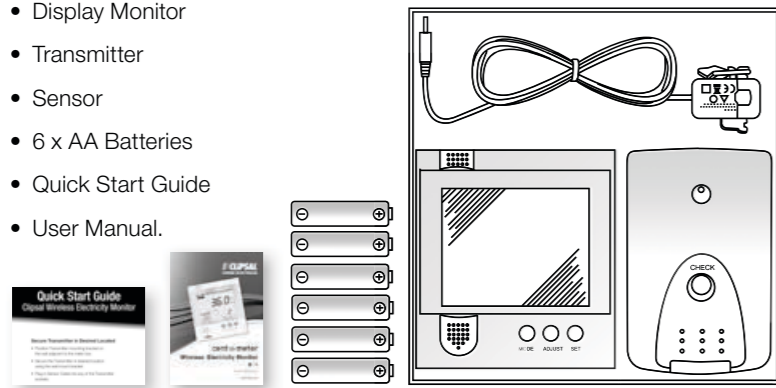

2

Locate Live Outgoing Supply Cable


- The Sensor Clip should be fitted over the insulated red phase wire running into or out of the electricity meter located in the meter box (usually furthest to the right)
- At no time should force or undue pressure be applied to any wiring or connections.

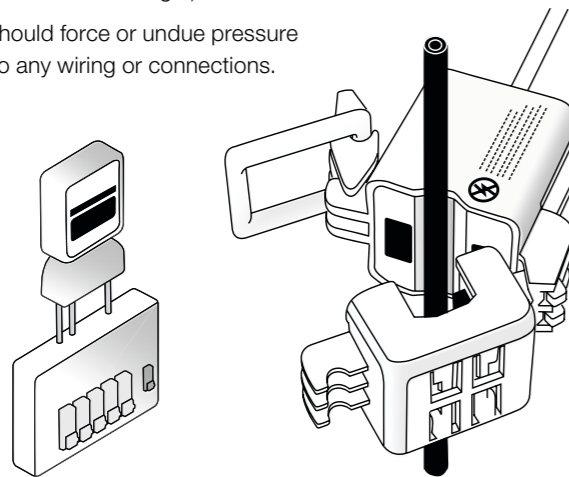

3

Install Transmitter Batteries


- Unscrew battery compartment cover using a Phillips screwdriver
- Insert batteries, matching polarities (+/-)
- The CHANNEL should be set to 2. Please refer to 'Advanced Settings' in the manual if changing channels
- Screw the battery compartment cover back into place
- Press RESET after each battery change.

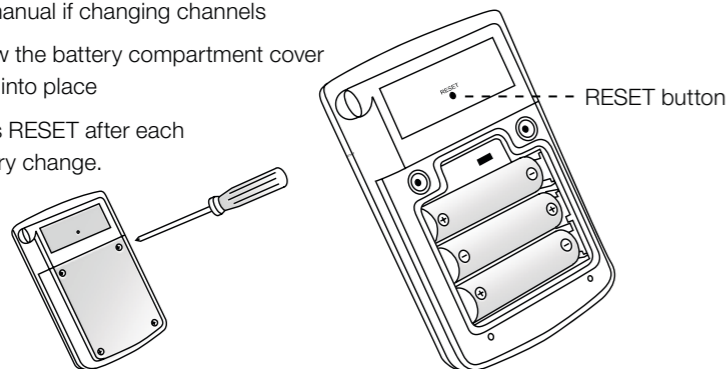

4

Secure Transmitter in Desired Location


- Position Transmitter mounting bracket on the wall adjacent to the meter box
- Secure the Transmitter in desired location using the wall mount bracket
- Plug in Sensor Cable into any of the Transmitter sockets.

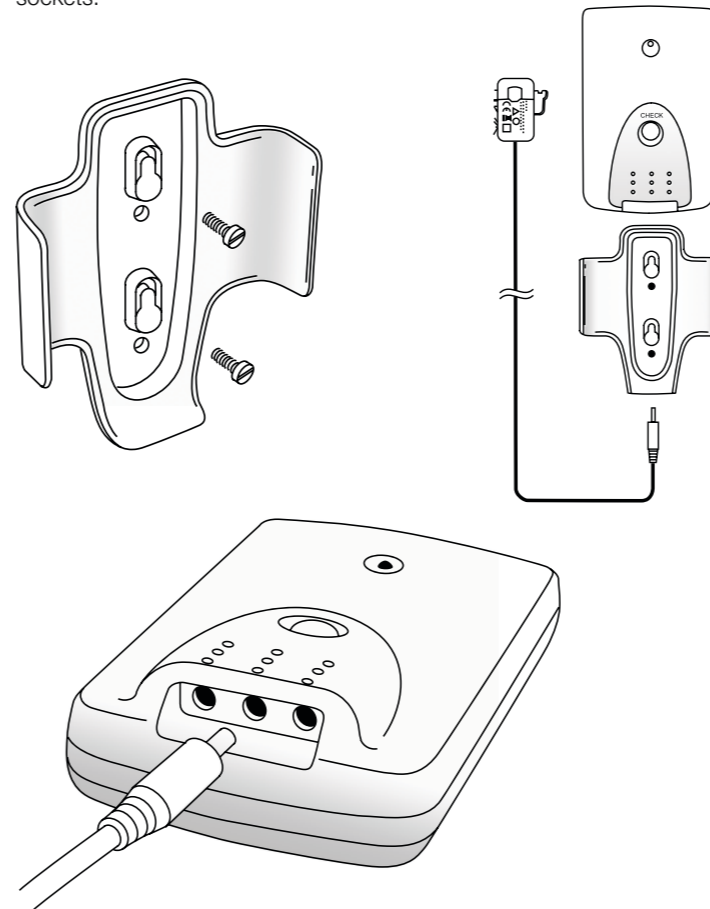

5

Install Display Monitor Batteries


- Slide off battery compartment cover
- Insert batteries, matching polarities (+/-)
- Slide battery compartment cover in place
- Press RESET after each battery change.

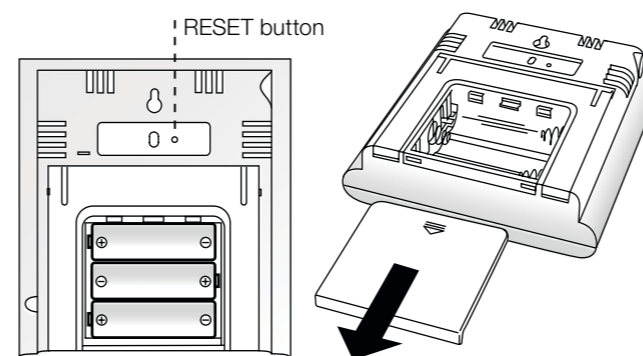

6

Pair Transmitter to Display Monitor


- Press and hold SEARCH key on the back of the Display Monitor until a tone is emitted
- The unit will search for a Transmitter in range for a maximum of two minutes
- Press and hold the CHECK key on the Transmitter until the red LED flashes
- The unit will transmit data every two seconds for 30 seconds.

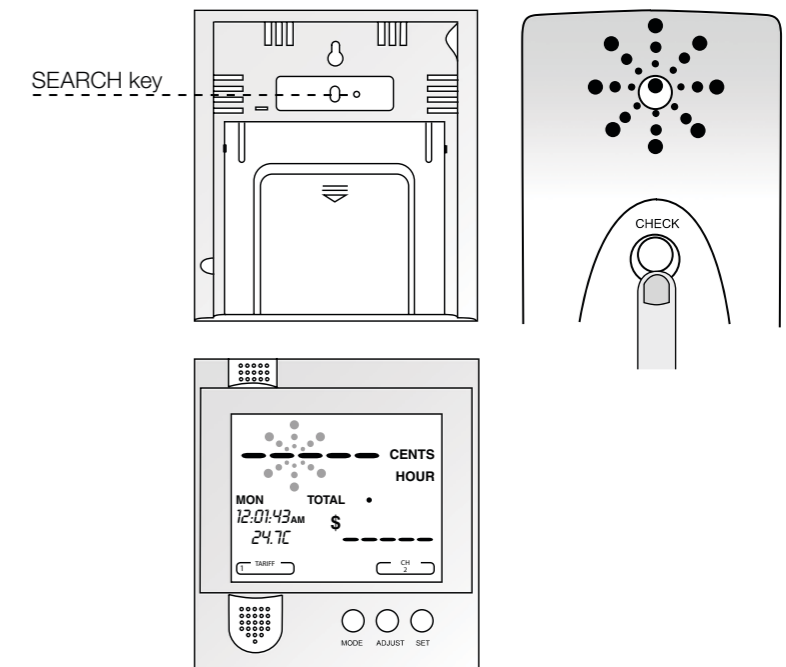

7

Setting Up Display Monitor



- Press and hold the SET key to enter SETTING mode
- Press the MODE key to toggle between menu options
- Press SET key to enter sub-menus.

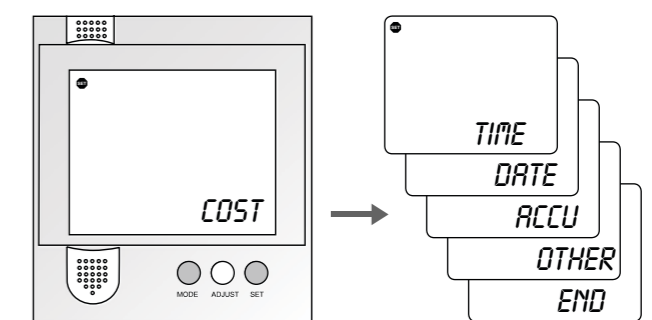

7a

To Set Up the Cost on the Display Monitor


- Press SET key to enter COST menu
- Press the MODE key to scroll and SET key to enter TAR1 sub-menu
- Press SET key to enter TIME menu
- Press ADJUST key to scroll and SET key to set Tariff Start Time (HH:MM)
- Press SET key to enter RATE menu
- Press ADJUST key to scroll and SET key to set tariff rate (e.g. 10:55 cents)
- Press the SET key to enter PEAK menu
- Press ADJUST key to toggle and SET key to select as a peak time (YES/NO)
- Press SET key to enter ALARM menu
- Press ADJUST key to toggle and SET key to enable /disable alarm (ON/OFF)
- Press ADJUST key to scroll and SET key to set alarm level (e.g. \$02.00)
- Press MODE key to scroll and SET key to exit TAR1 sub-menu.

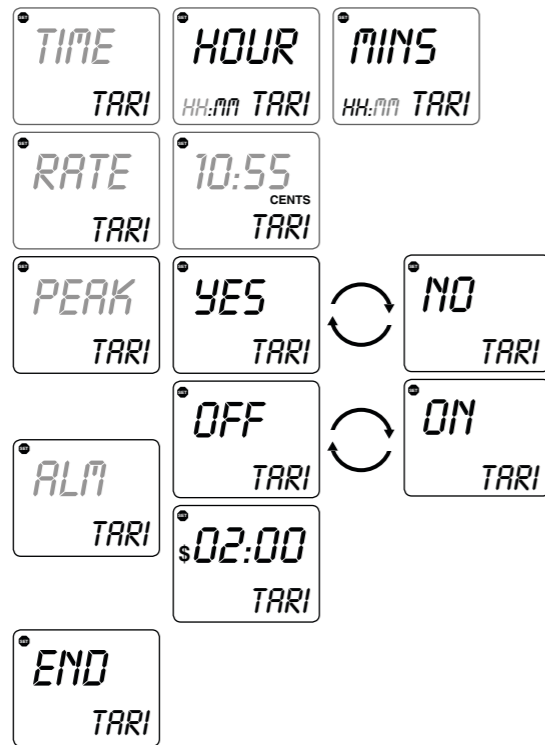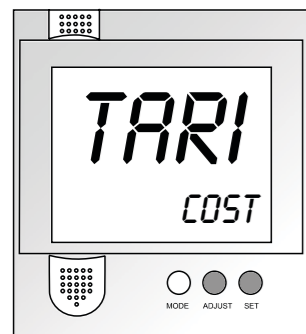

7b

To Set Up Tariffs 2/3/4 on the Display Monitor


- Press MODE key to scroll and SET key to enter TAR2, TAR3 or TAR4 sub-menus
- Press ADJUST key to toggle and SET key to enable/disable tariff
- Follow concurrent steps in section 7a.

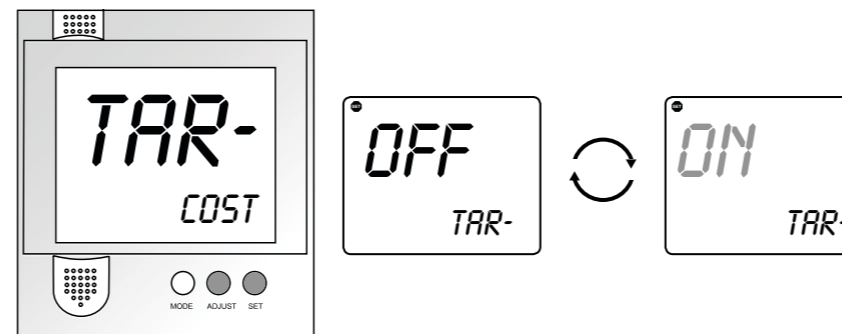

7c

To Set Up the Time on the Display Monitor



- Press the SET key to enter TIME sub-menu
- Press ADJUST key to toggle and SET key to select 12/24 hour clock
- Press ADJUST key to toggle and SET key to set clock hours
- Press ADJUST key to toggle and SET key to set clock minutes.

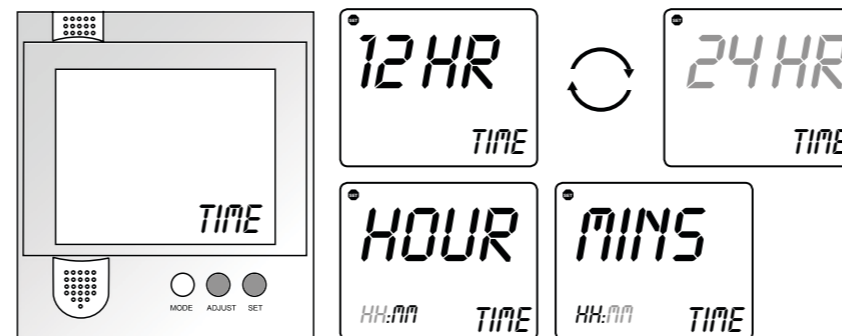

7d

To Set Up the Date on the Display Monitor


- Press SET key to enter DATE sub-menu
- Press ADJUST key to toggle and SET key to select DD:MM or MM:DD date and display
- Press ADJUST key to toggle and SET key to set Year
- Press ADJUST key to toggle and SET key to set Month
- Press ADJUST key to toggle and SET key to set Day.

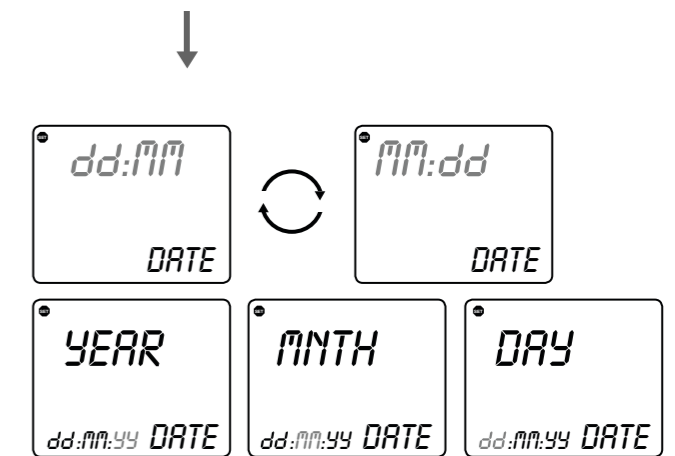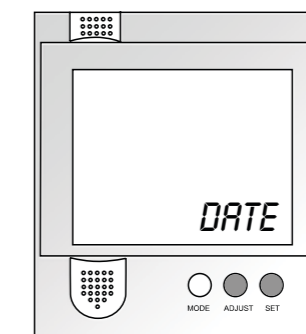

8

To Exit Menu

- Press MODE key repeatedly until END, and press SET key to exit setup.

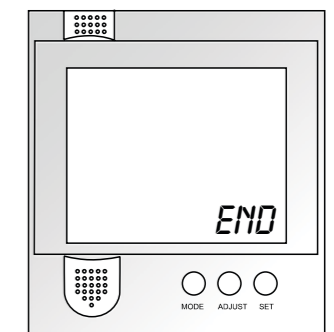

TO SET OTHER FUNCTIONS, SEE USER MANUAL.